





IP Touch 4008 Basic User Training Guide



Version: 20081216



Overview – IP Touch 4008

- Handset
- Display
- 6 Programmable Buttons
- Dialing keypad
- End
- Envelope (Message)
- Redial
- Speaker
- Mute
- Volume up/down
- Hold
- Transfer
- Navigator
- OK Button
- Back Button
- *i* Button
- Phone Book Button





Internal Call

• Lift the handset and dial the four digit internal extension number .

- Dial the four digit internal extension number with the handset down to make a hands-free call.
- Hang up, or press the End button to end the call.





External Call

• Lift the handset and dial 9 plus the external number (if you are using a classroom phone, you will be prompted to enter a 5 digit PIN)

- Dial 9 plus the external number with handset in place to make a hands-free call
- Hang up, or press the End button to end the call.







Handset & Speakerphone

- Switch from Handset to Speakerphone
- Press the Speaker button, and replace the handset
- Switch from Speaker-phone to Handset
- Lift the handset
- The speakerphone is automatically turned off
- Microphone Mute
- While on a call, press the Mute button (it will flash and caller will not be able to hear you).
- Press the Mute button again to deactivate (caller will hear you).





Redial

- Press the Redial button
- The last number is redialed

- Press and hold the Redial button (2 – 3 seconds) to see a list of the last eight outgoing calls.
- Use the Up/Down arrows to scroll to the number you wish to redial.
- Press OK to dial the number.







Place A Call On Hold

- Press the lit line button to place your call on hold. (Light will flash when call is on hold)
- Press the flashing line button to retrieve the call.

- Press the hold button.
- Press the flashing line button to retrieve the call.







Answer A Second Call

- While on your current call, you will hear a short tone and the new caller's ID will display.
- Your second line button will be flashing with the new incoming call.
- Press the flashing line button to answer the second incoming call. (First caller will automatically be placed on hold.)







Transfer A Call

- WARM TRANSFER
- While on a call, press Transfer.
- Dial the four digit extension number.
- When the second party answers, announce the call.
- Press Transfer again to complete.
- BLIND TRANSFER
- While on a call, press Transfer .
- Dial the four digit extension number.
- Press Transfer again to complete.





Three Party Conference Call

- While on your current call, use the down arrow until 'Conference' is displayed.
- Press OK.
- Dial the third party.
 (Internal or External.)
- Announce the call to the third party.
- Press the down arrow until 'Conference' is displayed again.
- Press OK.





Program Personal Speed Dials

- You can program up to 9 personal speed dials.
- Press the Phonebook button.
- will display on screen.
 (use down arrow to display speed dials 2 9.)
- Press OK.
- Use the dial pad to enter the telephone number. (for external, 9 + number)
- Press OK to save.
- Press End to exit programming.







Using Personal Speed Dials

- Press the Phonebook button.
- Use the up/down arrows to scroll to the number you wish to call.
- Press OK.

